


(1) STANDARD STEEL FENCE POST ENCASED WITH 1½" PVC PIPE WITH REFLECTIVE TAPE (APPROX. 3" WIDE, PLACED NEAR TOP). INSTALL 2' FROM VALVE BOX

THE 1" HDPE PIPE SHALL BE DRAINED OF WATER TO A MIN. DEPTH OF THE HORIZONTAL LAYING LENGTH. THIS OPERATION SHALL BE DONE PRIOR TO THE TIME POTENTIAL FREEZING MAY OCCUR. IN ANY CASE, DRAIN THE WATER UPON COMPLETION OF THE DISINFECTION.

LEAVE 3' TO 5' PE PIPE PROTRUDING ABOVE GROUND. PLUG PIPE ENDS IMMEDIATELY AFTER FLUSHING AND DISINFECTING OPERATIONS, WITH APPROVED RIBBED INSERT PIPE END PLUGS. PLUGS SHALL BE ADEQUATE FOR PRESSURE TESTING OF THE PE PIPE.

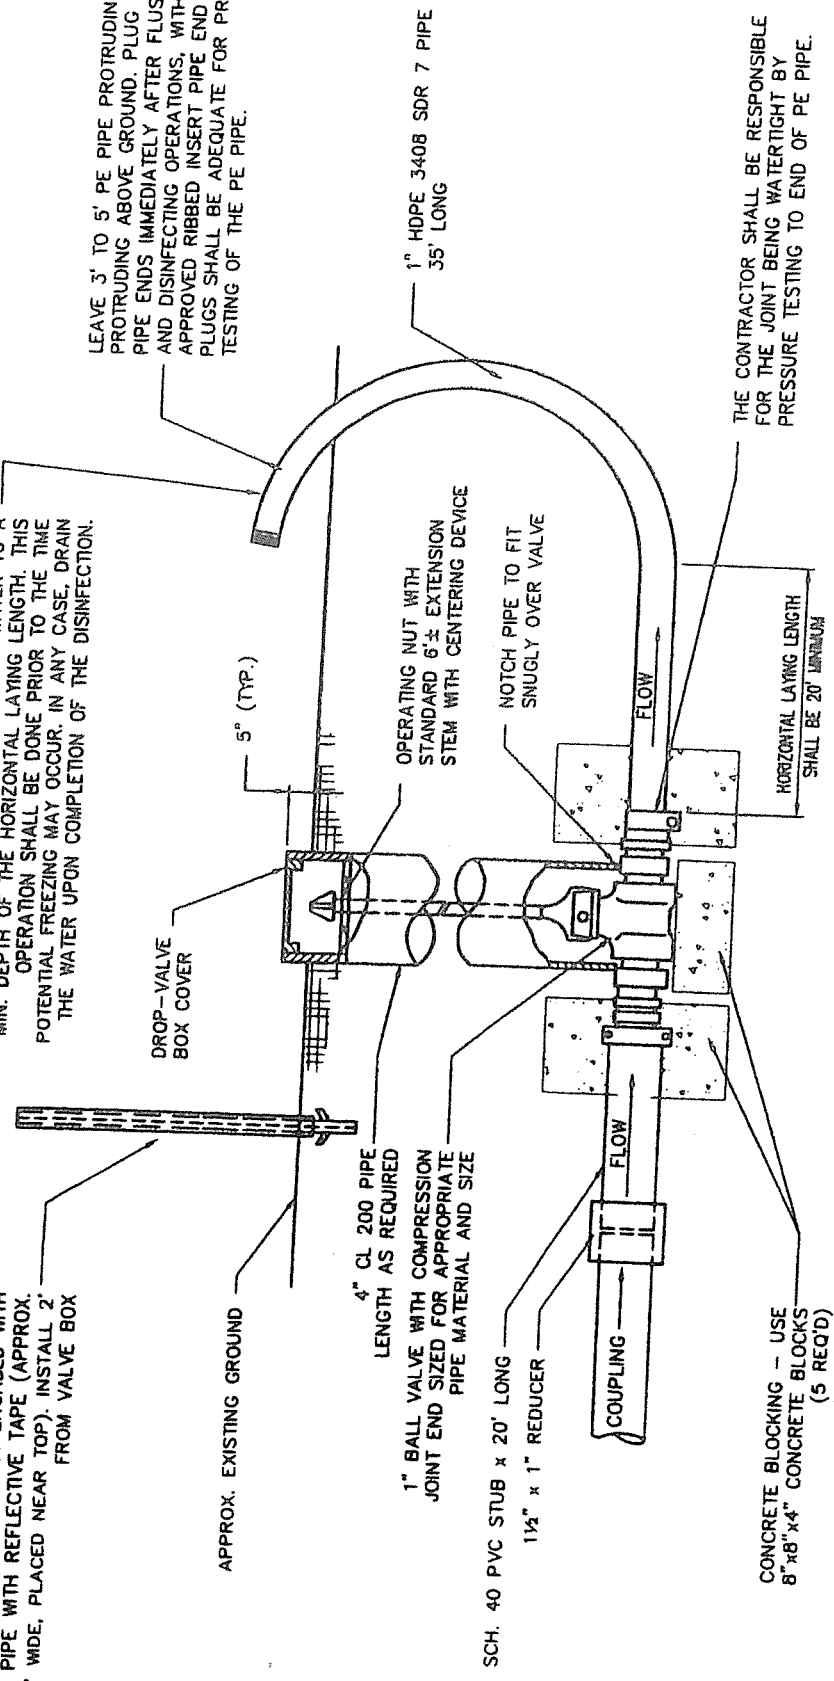

THE CONTRACTOR SHALL BE RESPONSIBLE FOR THE JOINT BEING WATERTIGHT BY PRESSURE TESTING TO END OF PE PIPE.

CURB STOP
NOT TO SCALE